

SENSOR CONTROL PANEL





CONTENTS

Safety requirements	2
Purpose	
Delivery set	
Technical data	
Installation and connection	
Control	6

This user's manual is a main operating document intended for technical, maintenance, and operating staff.

The manual contains information about purpose, technical details, operating principle, design, and installation of the S14/S15 unit and all its modifications.

Technical and maintenance staff must have theoretical and practical training in the field of ventilation systems and should be able to work in accordance with workplace safety rules as well as construction norms and standards applicable in the territory of the country.

SAFETY REQUIREMENTS

- Please read the user's manual carefully prior to installing and operating the unit.
- All user's manual requirements as well as the provisions of all the applicable local and national construction, electrical, and technical norms and standards must be observed when installing and operating the unit.
- The warnings contained in the user's manual must be considered most seriously since they contain vital personal safety information.
- Failure to follow the rules and safety precautions noted in this user's manual may result in an injury or unit damage.
- After a careful reading of the manual, keep it for the entire service life of the unit.
- · While transferring the unit control, the user's manual must be turned over to the receiving operator.

UNIT MOUNTING AND OPERATION SAFETY PRECAUTIONS



 Disconnect the unit from power mains prior to any installation operations.



- Do not operate the unit outside the temperature range stated in the user's manual.
- Do not operate the unit in aggressive or explosive environments.



Do not lay the power cable of the unit in close proximity to heating equipment.



 While installing the unit follow the safety regulations specific to the use of electric tools.



discretion.Do not bend the power cable.

Do not change the power cable length at your own

- Avoid damaging the power cable.
- Do not put any foreign objects on the power cable.



Unpack the unit with care.





 Do not use damaged equipment or cables when connecting the unit to power mains.



 When the unit generates unusual sounds, odour or emits smoke disconnect it from power supply and contact the Seller




 Do not touch the unit controls with wet hands.




Do not wash the unit with water.



 Do not carry out the installation and maintenance operations with wet hands.







 Disconnect the unit from power mains prior to any technical maintenance.



THE PRODUCT MUST BE DISPOSED SEPARATELY AT THE END OF ITS SERVICE LIFE.

DO NOT DISPOSE THE UNIT AS UNSORTED DOMESTIC WASTE.

PURPOSE



THE UNIT SHOULD NOT BE OPERATED BY CHILDREN OR PERSONS WITH REDUCED PHYSICAL, MENTAL, OR SENSORY CAPACITIES, OR THOSE WITHOUT THE APPROPRIATE TRAINING.

THE UNIT MUST BE INSTALLED AND CONNECTED ONLY BY PROPERLY QUALIFIED PERSONNEL AFTER THE APPROPRIATE BRIEFING.

THE CHOICE OF UNIT INSTALLATION LOCATION MUST PREVENT UNAUTHORISED ACCESS BY UNATTENDED CHILDREN.

The wall control panel with a sensor display is designed for controlling industrial and domestic supply and exhaust ventilation units as well as other air handling units.

The control panel is not designed for standalone operation. It is rated for continuous operation.

NAME Control panel Mounting box for flush wall mounting Mounting box for surface wall mounting User's manual Packing box Packing box DELIVERY SET NUMBER 1 pc. 1 pc. 1 pc. 1 pc. 1 pc. 1 pc.




TECHNICAL DATA

Supply voltage [V] DC 8-30 Temperature range [°C] 0 ...+45


Humidity range [%] 5...80 (without condensation)


Casing material Plastic
Sensor surface material Glass
Electrical protection class IP30
Weight [g] 190

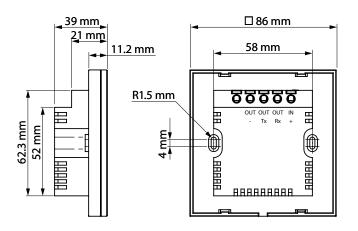


Mounting box for wall flush mounting



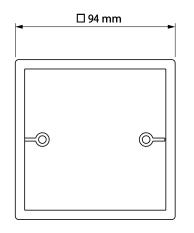



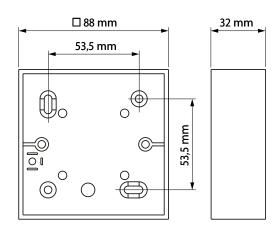

INSTALLATION AND CONNECTION



CHECK THAT THE UNIT IS DISCONNECTED FROM POWER SUPPLY PRIOR TO ANY OPERATIONS!



THE UNIT MUST BE MOUNTED BY A QUALIFIED EXPERTS ONLY, PROPERLY TRAINED AND POSSESSING THE REQUIRED TOOLS AND MATERIALS.




DO NOT INSTALL THE UNIT ON AN UNEVEN SURFACE! WHEN TIGHTENING THE SCREWS DO NOT APPLY EXCESSIVE FORCES TO AVOID THE UNIT DEFORMATION.




CONTROL PANEL WALL FLUSH MOUNTING


CONTROL PANEL WALL SURFACE MOUNTING


- 1. Disconnect the connector from the connection cable of the control panel.
- 2. Route the cable to the panel mounting location, prepare a niche in the wall and install the mounting box for wall flush mounting.

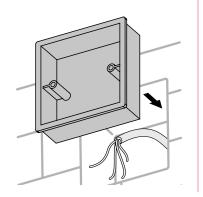


2. Route the cable to the panel mounting location and install the mounting box for wall flush mounting with screws (not included in the delivery set).

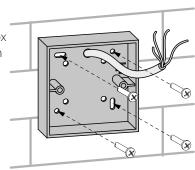

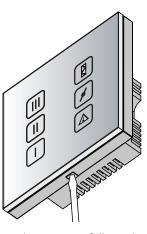




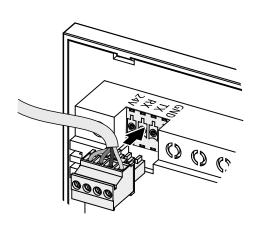


- 3. Use a screwdriver to carefully undo the clip on the bottom edge of the control panel and remove the screen from the casing.
- 4. Connect the wires of the cable to the connector in accordance with the label on the panel casing.
- 5. Connect the connector to the panel.


6. Screw the casing to the mounting box through the fastening holes. Fastening screws for control panel mounting are included in the control panel delivery set.

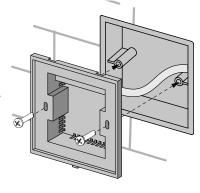


6. Fix the back side of the casing to the junction box through the mounting holes with screws. Fastening screws for mounting of the control panel are included in the control panel delivery set.

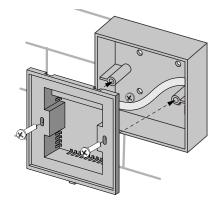

7. Fix the screen on the casing by pulling it until it is latched.

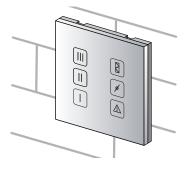

7. Fix the screen on the casing by pulling it until it is latched.

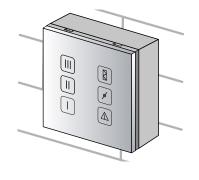



www.blaubergventilatoren.de S14/S15

CONTROL

The unit is operated from the wall-mounted control panel by using the touch buttons.

The activated button is highlighted.

The signal from the control panel is sent to the control unit and the unit starts operation with a set operation mode.

WARNING!

The control panel must be fixed on a surface in operational position!

The control panel should be connected to a power supply only when all of the following conditions have been met:

- the panel casing is mounted
- all necessary connections have been carried out
- the sensor display is fixed to the casing


Initialization of the control panel followed by triple blinking of all the buttons will occur after connection to a power supply.

WARNING!

- Do not switch the buttons on the unsecured panel to avoid false speed switching!
- Pressing the buttons quickly and shortly may result in malfunction of the unit!
- Try to practise a firm press on the interface buttons with your finger cushion as the touch-sensitive panel is less sensitive compared to a typical mobile phone or tablet screen.
- Press the button precisely in the desired sector of the control panel to switch the speed.



Control panel buttons indication and functions

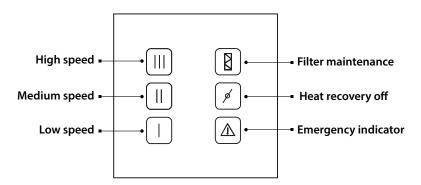

Control panel indication when the unit is off

The touch buttons on the control panel are not highlighted.

The filter maintenance indicator and emergency indicator are highlighted in the respective cases.

Turning the unit on

Press one of three speed setting buttons.

The selected button will be highlighted and the unit switches to the required speed.



Press the inactive speed setting button once.

The button will be highlighted and the unit will switch to the selected speed..

Turning the unit off

To turn the unit off press the highlighted speed button.

Heat recovery off

Press the button once.

When the mode is activated, the button is illuminated.

Units with bypass – the bypass damper opens. Units without bypass – the supply fan is switched off.

Each time a touch button is pressed, the current unit status is changed and saved in the control panel memory.

Filter maintenance

As the unit reaches the set value of operating hours, the touch button is highlighted to remind about filter cleaning or replacement.

To reset the motor meter after replacement or cleaning of the filters, press and hold the filter replacement indicator for 5 seconds.

After resetting the motor meter the filter replacement indicator goes down. When customizing the timer software for setting the number of hours refer to the Filter maintenance section.

— Alarm

In case of alarm, the alarm indicator is highlighted.

Contact the Seller for troubleshooting.







